

VIS-T PRO User(rider) manual

- Side stand :** When side stand down, gear position in idle & engine running.
Neutral indicate will be blink.
This side stand indicate can be disable by follow VIS-T setting page.
When disable side stand indicate. Neutral indicate not blink anymore.
- N gear position :** Gear position in idle. Event engine running or not.
- Low fuel :** Low fuel warning. This indicate always show up if fuel level going low in gas tank.
- Turn signal :** Blinked when turn signal currently in use.
- Engine light :** Warning engine light show up. Something going wrong.
Diagnostic engine code to solve this issue.

⚠ This warning very critical. Please stop engine immediately. ⚠

Coolant temperature over 110 C° : Check water cooling level or leaked point immediately.

Low oil pressure : Oil pressure is too low. Refill motor oil.

VIS-T PRO can control by press & hold **i** button until indicate show up as table below and then release button to change state.

Riding mode can use "MODE" button on OEM handle bar to change riding mode as well.

Some models bike don't have MODE & ABS control. This control sequence will not show any indicate & ignored that option.

Please keep pressing **i** button until get next control option. If don't seen any indicate can release button to cancel.

After entered.

Fuel level light signal indicate, SPEED & RPM will show up as table below. For 10 seconds or press **i** to return..

Traction control & ABS control will show operate as table below. Please wait until indicator process complete.

| RIDER MANUAL | | | | |
|--------------------------|--------------------------------|-----------|-----------|-----------|
| Indicator display Status | Indicator after engine running | | | |
| | Neutral | Turn | High beam | Warning |
| Side stand | Blink | | | |
| N gear position | On | | | |
| Low fuel | | Always on | | |
| Turn signal | | Blink | | |
| Coolant temp over 110 °C | | | Flash | Flash |
| Low oil pressure warning | | | | Flash |
| Engine light | | | | Always on |

Press & hold **i button until indicate show up As table below. Release button to setting.**

| Control sequence | Neutral | Turn | High beam | Warning |
|------------------|---------|------|-----------|---------|
| Fuel level ↓ | | | ON | ON |
| Ride mode ↓ | | ON | ON | ON |
| TC control ↓ | | | ON | |
| ABS control ↓ | | ON | | |
| Cancel | OFF | OFF | OFF | OFF |

Ride mode & ABS not available for some models. Control will be ignored.

| Fuel level D+▲ blink (SPEED&RPM show as table) | | | |
|---|----------|------|--|
| Fuel level | Speed | RPM | |
| 10% | 10 km/h | 1000 | |
| 20% | 20 km/h | 1500 | |
| 30% | 30 km/h | 2000 | |
| 40% | 40 km/h | 2500 | |
| 50% | 50 km/h | 3000 | |
| 60% | 60 km/h | 3500 | |
| 70% | 70 km/h | 4000 | |
| 80% | 80 km/h | 4500 | |
| 90% | 90 km/h | 5000 | |
| 100% | 100 km/h | 5500 | |

| Mode D+▲+↔ Blink 3 seconds (Mode changed) | | | |
|--|-------|------|-----------|
| | Speed | RPM | On 2 sec. |
| RAIN | 20 | 2000 | D |
| ROAD | 40 | 4000 | ↔ |
| SPORT | 60 | 6000 | ▲ |

Mode operate depend on models.
If not support this function will ignored.

| Traction control D Blink 3 seconds | | | |
|---|-------|------|-----------------|
| | Speed | RPM | D 2 Sec. |
| OFF (Deactivate) | 10 | 0 | OFF |
| On (TC operate) | 40 | 4000 | ON |

| ABS control ↔ Blink 3 seconds | | | |
|--------------------------------------|-------|------|-----------------|
| | Speed | RPM | ↔ 2 Sec. |
| OFF (Deactivate) | 10 | 0 | OFF |
| On (ABS activated) | 40 | 4000 | ON |

ABS control support for some models.
If that models don't have this function
ABS always activated.